# ETC22 - Embedded Technology Club

ETC22D - Embedded Technology Club Organizovaný ČVUT FEL v r. 2023/24 pro středoškolské studenty se zájmem o techniku a další její studium Setkání 9, 17.6.2024

### ETC22\_D setkání 7, náplň

- Seznámit se se způsobem nahrávání programu do G030 pomocí Cube programer 2.3.0 do STM32G030J6 – pouzdro SO8- 8 vývodů
- Zájemci sestavit, zapájet modul s STM32G030J6M6 na desce plošného spoje
- Zájemci programovat STM32G030J6M6 v jazyce Wiring (jako Arduino)
- Nucleo STM32F303RE jako osciloskop

### .Osciloskop LEO

LED - (COM9) STM32F303-Nucleo       – – ×         File       Settings       Help         Device info       STM32F303RE       Office length         Device       Sampling frequency       Analog to Digital         Sampling frequency       Analog to Digital       Counter         Device       Sampling frequency       Analog to Digital         Core frequency       Sampling frequency       Analog to Digital         Core frequency       Digital to analog       Sampling frequency         72MHz       Core frequency       Sampling frequency         12bis       Buffer length       30k bytes         Votage ref.       3300 mV         Channels       4         2.3000 NV       Scope pin         A5. A4, A3. PB14       Frequency         V15.2       ST HAL         Votage source       Ocumeter         Votage source       Ocolisocope         Vot						
File Settings Help Device info	LEO - (COM9) STM32F303-Nucleo					– 🗆 X
Device info       STM32F303-Nucleo         General Device       Digital to analog       Analog to Digital         Sampling frequency       2 Maps         72MH2       Data depth         12 bits       Buffer lenght         300 mV       Channels         (460800 baud)       Rx-PA3 TX-PA2         Piemware Version       2         2.30005       Generator pins         A2, D13       A5, A4, A3, PB14         Voltage sert       Oscilloscope         Voltage sert       Scope pin         A2, D13       Socilloscope         Voltage sert       Oscilloscope         Voltage serter       Scope pin         A2, D13       Socilloscope         Voltage serter       Oscilloscope         Votage serter       Oscilloscope	File Settings Help					
General       Digital to analog       Analog to Digital         Device       Sampling frequency       Analog to Digital         Stringer       Sampling frequency       Analog to Digital         Stringer       Sampling frequency       Analog to Digital         Core frequency       Analog to Digital       Sampling frequency         Timmes       Data depth       30k bytes         Cornection       Buffer lenght       30k bytes         Voltage ref.       3300 mV         Channels       As, A4, A3, PB14         Pimware Version       2         2.30 b05       Generator prins         A2, D13       Voltage source         Voltage source       Voltage source         Voltage source       Voltage cref.         Stringer       Output pins         Days, D5       PWM Generator         PWM Generator       PWM Sync         Uotput pins       Digital to analoge         Pummare       Voltage source         Voltage source       Voltage source	Device info	STM32E3	03-Nucleo			COM9: STM32F303-Nucleo
V1.5.2 ST HAL Voltage source Generator Connected to COM9 V1.5.2 ST HAL Voltage source Generator Voltmeter Connected to COM9 Critical Engineerine Critical Engineerin	GeneralDigital to analogDeviceSampling frequencySTM32F303RE2 MspsCore frequencyData depth72MHz12 bitsConnectionBuffer lenghtUART8k bytes(460800 baud)Voltage ref.RX-PA3 TX-PA23300 mVFirmware Version2FreeRTOSGenerator pinsV0 0.0A2, D13	Analog to Digital Sampling frequency 4 Msps Buffer lenght 30k bytes Voltage ref. 3300 mV Channels 4 Scope pin A5, A4, A3, PB14	Counter Modes HF LF FR EV Counter pins High F: A0 Low F: A0, A1 F Ratio: D7, A0 Events: A0, A1 Counter PWM Frequency 1 Hz - 9 MHz Resolution	PWM Sync. Max frequency 1 MHz Resolution 13,8889 ns Channels 4 Output pins Channel 1: PC6 Channel 2: PC7 Channel 3: PC8 Channel 4: PC9	Logic analyzer Sampling frequency NA Buffer lenght 20k bytes Channels 8 Input pins Channel 1: PB6 Channel 2: PB7 Channel 3: PB8 Channel 4: PB9 Channel 5: PB10 Channel 5: PB10 Channel 6: PB11 Channel 7: PB12 Channel 8: PB13	MENT OF MEASL
Generator     Oscilloscope     PWM Generator     PWM Sync     Logic analyzer     Disconnect     Scan       Connected to COM9     CTU FEE 2018 - Jiří Hladík, Jan Mucala ;;	V1.5.2 ST HAL	Voltmeter	4 bits - 16 bits Channels 2 Output pins D8, D5			Scully of Floring Engineering
Connected to COM9 CTU FEE 2018 - Jiří Hladík, Jan Mucala ,:	Generator	Oscilloscope	PWM Generator	PWM Sync	Logic analyzer	Disconnect Scan
	Connected to COM9				CTU	J FEE 2018 - Jiří Hladík, Jan Mucala ,;

#### Panel generátoru



### Kombinovaná funkce, generátor, osciloskop, čítač



### **Cube programmer**

Cube programmmer 2.3.0 – používáme pro počáteční naprogramování " option" bitů, případně pro další programování

Pro programování interní paměti FLASH procesoru STM32G030

Starší i novější verze 2.1.0; 2.13.0,.....

Používáme metodu s BOOT -loaderem přes UART Procesor se do BOOT módu dostane tak, že na pinu č.8, po zapnutí napájení bude vysoká úroveň " H", alespon + 1,9 V

SpustitCube programmer, zvolit metodu s UART a připojit "connect"

### Označení pinů STM32G030J6M6

Pro uvedení do režimu **BOOT** připojit pin. č. 8 **přes rezistor Rp=470 Ohmů** na kladné napájecí napětí VDD= +3,3 V

- Může být zapojen stále při vývoji, STM32Dino ponahrání kódu do paměti FLASH spustí kód. Pokud budeme chtít pustit kód při dalším zapnutí napájení, je třeba odstranit rezistor Rp, který zajišťuje přechod procesoru do režimu BOOT.
- Pin. č. 4 je vhodné používat jako výstupní. Pokud po zapnutí napájení na pinu č. 4 je nízká úroveň (0 V), zůstane procesor v RESET. Po odstaranění (0) se "rozeběhne".

Pro spolehlivý RESET připojíme mezi VDD (napájení + 3,3 V) a VSS (zem) vybíjecí rezistor 2k2 Reset procesoru provedeme odpojením " vidličky" – 4 kontakty z převodníku USB/ UART



Figure 10. STM32G031Jx SO8N pinout

### . Cube programmer, nastavení "option bitů"

-					
Prg ST	M32CubeProgrammer		– 🗆 X		
STM32 CubePr	rogrammer	fi 🕒 🎐	* 57		
	Option bytes		Connected		
	Read Out Protection	UART	<ul> <li>Disconnect</li> </ul>		
The second secon		UART configuration			
	User Configuration	Port	сом4 👻 💋		
OB	PCROP Protection	Baudrate	115200 -		
CPU	Write Protection	Parity	Even 👻		
SWV	> FLASH security	Data bits	8 🔻		
		Stop bits	1.0 -		
	OB – option bity	Flow control	Off 👻		
		RTS	0 -		
		DTR	0 -		
	Some of the option bytes might be hidden or clipped, Use the mouse wheel or the touch pad to scroll down     Apply     Read	Read Unprotect (MCU TZEN Regression (MCI	n <b>I</b>		
	Log Live Update Verbosity level   1 2 3				
	21:22:57 : UPLOADING	Targe	t information		
	21:22:57 : Address : 0x8000000 21:22:57 : Read progress:	Board Device	 STM32G03x/STM32G04x		
	21:22:58 : Time clansed during the read operation is: 00:00:01 142	Type Device ID	MCU 0x466		
0		Revision ID Flash size	 64 KB - Default		
?	100% 🛞	Bootloader Version			

### Cube programmer, nastavení "option bitů"



### Nahrání souboru xxxx.bin

Prg ST	M32CubeProgrammer									) ×
STM32 CubePr	ogrammer						(19)	f 🕒	y 🔆 🖌	57
	Memory & Fil	e editing							Connec	cted
	Device memory	sketch_jan05c_PWI	M_PA0_PB5_G03	0ino.G03XJ_LAB.t	pin × +			UART	Discol	nnect
<b>*</b>	Address 0x0	▼ Size	0x44C8	Message		<b>-</b> · · · · · · · · · · · · · · · · · · ·	X Download 🔻	UA Port	ART configuration	- 0
OB	Address	0	4				1	Baudrate		
<u>-</u>	0x0000000	20002000	08003741	File do	wnload complete		1		115200	· ·
CPU	0x0000010	00000000	00000000	<b>`</b>				Parity	Even	-
swv	0x0000020	00000000	00000000			ОК	i	Data bits	8	-
	0x0000030	00000000	00000000	08003791	08002D7B	7{		Stop bits		
1	0x0000040	08003791	08003791	08003791	08003791	.7777	1	otop oto	1.0	· ·
	0x0000050	08003791	08003571	08003581	08003591	.7q555.	1	Flow control	Off	-
	0x0000060	0000000	08003791	08003791	08003791	777		RTS	0	-
	0x0000070	08003791	08000921	08000939	08000941	.7!9A	i - i	DTR		
	0x0000080	08000959	08003791	08003791	08000971	Y77q	1	UIK	0	· ·
	0x0000090	0000000	08000989	080009A1	08003791	······i···.7	/	Read Unprotect (	(MCU)	
	Log			1	Live U	Jpdate Verbosity level	1 2 3			
	21:28:45 : Address	: 0x0800000						Та	arget information	
	21:28:45 : Erasing me 21:28:45 : Erasing int	emory corresponding t ernal memory sectors	o segment 0: [0 8]	<u> </u>				Board		
	21:28:46 : Download in Progress: Výběr souboru			start n	ahrávání	Device Туре	S1M32G03X/S	MCU		
$\bigcirc$	Z1:26:48 : Time elapsed during download operation: 00:00:02:043									
							~	Flash size	64 KI	B - Default
?			Maz	ání FLAS	SH 📃		100% 🗵	Bootloader Ve	rsion	

# Export přeloženého binárního souboru

Binární soubor Možno použít nezávisle pro Cube Progrmmer

💿 sketch_jan05c_PW	/M_PA0_PB5_G030_   Arduino 1.8.19		- 0	×		
File Edit Sketch Too	ls Help					
sketch_jan05c	Auto Format Archive Sketch Fix Encoding & Beload		Ctrl+T	©. ▼		
2 = { 3 }	Manage Libraries Serial Monitor		Ctrl+Shift+I Ctrl+Shift+M			
4 5 void loop	Serial Plotter		Ctrl+Shift+L	_		
o⊟{ 7 analogW 8 delay(	WiFi101 / WiFiNINA Firmware Upda	iter				
9 analogw 10 delay( 11 analogw 12	Board: "Generic STM32G0 series" Board part number: "G03XJ_LAB"			>		
13 14 15 File Edit Sk	an05c_PWM_PA0_PB5_G030_ Ard etch Tools Help	uino 1.8.19		-	×	
16 17 18	Verify/Compile Ct Upload Ct	trl+R trl+U			<b>1</b> 20-	
19 sketch 20 1 2⊡ {	Upload Using Programmer Cf Export compiled Binary Cf	trl+Shift+U trl+Alt+S				WD) erial)
3 } Done 4	Show Sketch Folder Ct	trl+K				)FU)
Add 5 voi Start 6⊡ { 7 5	Include Library Add File	>				
8 del	ay( 400 );					

# Výběr COM portu

Volba metody nahrávání " Upload method" "G03XJ" – náš modul

	6) IN 1	Auto Format	Ctrl+T	
		Archive Sketch		
ske	etch_jan05c	Fix Encoding & Reload		
- 2 ⊟	I SCOO	Manage Libraries	Ctrl+Sh	ift+l
3	}	Serial Monitor	Ctrl+Sh	ift+M
4	-	Serial Plotter	Ctrl+Sh	ift_1
5	void loop		Cui+3i	III.+L
6日	{	WiFi101 / WiFiNINA Firmware Updater		
7	analogW			
8	delay(	ArduBlock		
10	delav(	Poards "Conoria STM22G0 corias"		
11	analogw	Board: Generic STMS200 series		
12	delay(	Board part number: "G03XJ_LAB"		
13	analogW	U(S)ART support: "Enabled (generic 'Serial')"		
14	delay(	USB support (if available): "None"		
15	analogW	Optimize: "Smallest (-Os default)"		
16	delay(	Debug symbols and core logs: "None"		
17	analogW	C Runtime Librang "Newlib Nano (default)"		
10	аетау(			
20	1	Upload method: "STM32CubeProgrammer (Serial)"		
21		Port: "COM4"		
		Get Board Info		
Done	uploading.	D		
Add	lress:	Programmer		
Start	; operatic	Burn Bootloader		